



Original	Replacement
Timer Set	Sleep / Timer
Standby - On	Power
Prog / System	Menu / Home
Prog / System	TV/Radio /
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
Rec	Rec / Rec Mode
Display	Display / Media
Zoom	Zoom / Size
P -	CH- / Page-
Clear	Shift + Exit / Cancel / Clear
Exit / Status	Exit / Cancel / Clear
P +	CH+ / Page+
Title	Sound / Title
System	Smart / List
Return	Back / Return

Original	Replacement
DVD	Shift + 2
TUNER	Shift + 6
VCR	Shift + 4
VCR Menu	D.Menu / Top
Up	Up
OK	OK
Left	Left
Right	Right
Stop	Stop / Hold
Down	Down
Play	Play / Slow
<< REW	<< / Tune-
Pause	Pause / Step / Freeze
>> FF	>> / Tune+
1	1
2	2
3	3







Original	Replacement
 Timer Set	 Sleep / Timer
 Standby - On	 Power
 Prog / System	 Menu / Home
 Prog / System	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Display	 Display / Media
 Zoom	 Zoom / Size
 I<<	 I<< / Preset-
 Clear	 Exit / Cancel / Clear
 I>>	 I>> / Preset+
 Title	 Shift + Sound / Title
 Mode	 Text / Goto
 Return	 Back / Return
 DVD	 Shift + 2
 TUNER	 Shift + 6




























Original	Replacement
 VCR	 Shift + 4
 Disc Menu	 D.Menu / Top
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down
 Play	 Play / Slow
 << REW	 << / Tune-
 Pause	 Pause / Step / Freeze
 >> FF	 >> / Tune+
 1	 1
 2	 2
 3	 3
 Slow	 Shift + Play /
 4	 4







Original	Replacement
 Standby - On	 Power
 Prog / System	 TV/Radio /
 Prog / System	 Menu / Home
 Band	 Smart / List
 I<<	 CH- / Page-
 I<<	 I<< / Preset-
 >>I	 CH+ / Page+
 >>I	 >>I / Preset+
 DVD	 Shift + 2
 TUNER	 Shift + 6
 VCR	 Shift + 4
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down

Original	Replacement
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Surround	 Eject / Surround
 Sound	 Sound / Title
 Vol -	 Vol-
 Vol +	 Vol+

