







 



 

 
































 
Original	Replacement
 Power	 Power
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Option	 Setup / OPT /
 [ I ]	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu/Browse	 Menu / Home
 [ ≡ ]	 Text / Goto
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0	 0
 P<P	 Back / Return
 <<	 << / Tune-
 Stop/Cancel	 Exit / Cancel / Clear
 Stop/Cancel	 Stop / Hold







Original	Replacement
 Power	 Power
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 P+	 CH+ / Page+
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 P↔P	 Fav / Marker / PC
 <<	 << / Tune-
 Stop/Cancel	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 Info	 Info / Angle
 Subtitle	 Subtitle / EQ
 Back	 Back / Return
 Pause	 Pause / Step / Freeze





Original	Replacement
Power	Power
Red/Demo	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Guide	Guide / EPG / -/--
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Teletext	Text / Goto
P+	CH+ / Page+
P-	CH- / Page-
1	1
2	2

Original	Replacement
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
P↔P	Fav / Marker / PC
<<	<< / Tune-
Stop/Cancel	Stop / Hold
Play	Play / Slow
>>	>> / Tune+
Rec	Rec / Rec Mode
Info	Info / Angle
[12]	Zoom / Size
Subtitle	Subtitle / EQ



