 


 
 
 

 
 

 


 
 












 







 

 

 


 
 
 


 
 
 
 


 



 






 
 






Original	Replacement	Original	Replacement
	Power		Power
	ambilight		Pre Ch
	Windows		Options
	Exit/TV		Exit
	Rakuten Tv		Shift + Media
	Netflix		Media
	Menu		Menu
	Smart/Colors		Smart
	Sources/Pair		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	←		Back
	Home		Shift + Smart
	+		TV/R
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Pause		Pause
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Tv Guide		Guide
	CH+		Ch +
	CH-		Ch -
	1		1





Original		Replacement		Original		Replacement	
2	2	2	2				
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
TEXT	Text	REPEAT TEXT	Text				
LIST	List	DISC NAV LIST	List				

