













 



 



















Original	Replacement
 Standby/On	 Power
 Standby/On Tv	 Shift + Power
 Mute Tv	 Mute / Dimmer
 Child Lock	 TV/Radio /
 Monitor	 AV / Input / RDS
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Turbo Timer	 Display / Media
 0	 0

Original	Replacement
 Timer	 Sleep / Timer
 Menu	 Menu / Home
 Up/P+	 Up
 P+ Tv	 CH+ / Page+
 OK	 OK
 Left/Vol-	 Left
 Vol- Tv	 Vol-
 Right/Vol+	 Right
 Vol+ Tv	 Vol+
 Select	 D.Menu / Top
 Down/P-	 Down
 P- Tv	 CH- / Page-
 Clear	 Exit / Cancel / Clear
 Play	 Play / Slow
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+



