
























 

















 
 


















 







| Original | Replacement |
|---|--|
|  |  Power |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  Smart / List |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  Picture / Format |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Guide / EPG / -/-- |
|  |  0 |
|  |  Mute / Dimmer |
|  |  Info / Angle |
|  |  Menu / Home |

| Original | Replacement |
|---|--|
|  |  CH+ / Page+ |
|  |  Up |
|  |  Left |
|  |  Vol- |
|  |  OK |
|  |  Right |
|  |  Vol+ |
|  |  Text / Goto |
|  |  CH- / Page- |
|  |  Down |
|  |  AV / Input / RDS |
|  |  Setup / OPT / |
|  |  Display / Media |
|  |  Zoom / Size |
|  |  D.Menu / Top |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |









 






























 


| Original | Replacement |
|---|--|
|  |  Power |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  Smart / List |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  Picture / Format |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Guide / EPG / -/-- |
|  |  0 |
|  |  Info / Angle |
|  |  Menu / Home |
|  |  CH+ / Page+ |

| Original | Replacement |
|---|---|
|  |  Up |
|  |  Left |
|  |  Vol- |
|  |  OK |
|  |  Right |
|  |  Vol+ |
|  |  Text / Goto |
|  |  CH- / Page- |
|  |  Down |
|  |  AV / Input / RDS |
|  |  Setup / OPT / |
|  |  Pause / Step / Freeze |
|  |  Stop / Hold |
|  |  Play / Slow |
|  |  I<< / Preset- |
|  |  >>I / Preset+ |
|  |  << / Tune- |





| Original | Replacement |
|--|--|
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  PIP |  Smart / List |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  [<>] |  Picture / Format |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  -/-- |  Guide / EPG / -/-- |
|  0 |  0 |
|  Mute |  Mute / Dimmer |
|  i |  Info / Angle |
|  Z |  Menu / Home |

| Original | Replacement |
|---|---|
|  P+ |  CH+ / Page+ |
|  P+ |  Up |
|  - |  Left |
|  - |  Vol- |
|  OK |  OK |
|  + |  Vol+ |
|  + |  Right |
|  TXT |  Text / Goto |
|  P- |  CH- / Page- |
|  P- |  Down |
|  AV |  AV / Input / RDS |
|  Scan/[] |  Setup / OPT / |
|  PAP/Pause |  Pause / Step / Freeze |
|  Size/Stop |  Stop / Hold |
|  Pos/Play |  Play / Slow |
|  Red/ < |  I<< / Preset- |
|  Green/> |  >> / Preset+ |





| Original | Replacement |
|----------|--------------------|
| | Power |
| | 1 |
| | 2 |
| | 3 |
| | Smart / List |
| | 4 |
| | 5 |
| | 6 |
| | Picture / Format |
| | 7 |
| | 8 |
| | 9 |
| | Guide / EPG / -/-- |
| | 0 |
| | Info / Angle |
| | Menu / Home |
| | CH+ / Page+ |

| Original | Replacement |
|----------|-----------------------|
| | Up |
| | Vol- |
| | Left |
| | OK |
| | Vol+ |
| | Right |
| | Text / Goto |
| | CH- / Page- |
| | Down |
| | AV / Input / RDS |
| | Setup / OPT / |
| | Pause / Step / Freeze |
| | Stop / Hold |
| | Play / Slow |
| | I<< / Preset- |
| | >> / Preset+ |
| | << / Tune- |



