




 

 

 


 

 

 

 



 


 

 
 

 


 

 
 

 


 


 


 







Original		Replacement		Original		Replacement	
	Power Tv		Power		1		1
	Input 1		Shift + 1		2		2
	Input 2		Shift + 2		3		3
	Input 3		Shift + 3		4		4
	Input 4		Shift + 4		5		5
	Input 5		Shift + 5		6		6
	Input 6		Shift + 6		7		7
	Input 7		Shift + 7		8		8
	Input 8		Shift + 8		9		9
	TV		TV/Radio /		[i+]/Info		Shift + Info / Angle
	DTV		D.Menu / Top		0		0
	Radio		Shift + TV/Radio / Program		P.Info		Info / Angle
	[≡o]		Sleep / Timer		P+		CH+ / Page+
	[...]		Subtitle / EQ		CH.Return		Shift + Back / Return
	[≡?]		Shift + AV / Input / RDS		Vol+		Vol+
	[≡+]		Shift + Stop /		P-		CH- / Page-
	[≡]		Text / Goto		Mute		Mute / Dimmer





Original	Replacement	Original	Replacement
	Vol-		Vol-
	X/Exit		Exit / Cancel / Clear
	EPG/DVD Top Menu/Guide		Guide / EPG / /-/-
	Down		Down
	Left		Left
	Enter		OK
	Right		Right
	Menu/Home		Menu / Home
	Up		Up
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>I		>>I / Preset+
	Pause/Standby		Pause / Step / Freeze
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	CTRL/HDMI		Display / Media
	Rec		Rec / Rec Mode
	Rec Stop		Shift + Rec / Rec Mode
	Stop		Stop / Hold
	·->/CM Skip		Shift + >> /
	Tools/I-II		Setup / OPT /
	DVD/Screen		Zoom / Size
	HDD/AV Selection		AV / Input / RDS

