 

 

 

 





 











 
 


 



 



 









 

 























Original	Replacement	Original	Replacement
 Power	 Power	 Zoom	 Zoom / Size
 DVD/CD	 Shift + 2	 Playlist2	 Green / APP / Repeat
 Tuner(FM/AM)	 Shift + 6	 7	 7
 Sound Retreiver	 Shift + Title / Sound	 8	 8
 USB	 Shift + 8	 9	 9
 Line	 TV/Radio /	 Playlist3	 Yellow / YouTube / Repeat
 Open/Close	 Eject / Surround	 Clear	 Exit / Cancel / Clear
 1	 1	 0	 0
 2	 2	 Display	 Display / Media
 Audio	 Audio / Lang I/II	 Top Menu	 D.Menu / Top
 3	 3	 Setup	 Setup / OPT /
 Subtitle	 Subtitle / EQ	 Up/Tune+	 Up
 Playlist1	 Red / Netflix / Search	 Menu	 Menu / Home
 4	 4	 SR+	 Picture / Format
 5	 5	 Left/ST-	 Left
 Angle	 Info / Angle	 Enter	 OK
 6	 6	 Right/ST+	 Right





Original	Replacement	Original	Replacement
 MCACC	 Smart / List	 CH+ Tv	 CH+ / Page+
 Home Menu	 Shift + Menu /	 Vol+ Tv	 Shift + Vol+
 Down/Tune-	 Down	 Sleep	 Sleep / Timer
 Return	 Back / Return	 Input Tv	 AV / Input / RDS
 Test Tone	 Guide / EPG / -/--	 CH- Tv	 CH- / Page-
 F.S.Surr	 Fav / Marker / PC	 Vol- Tv	 Shift + Vol-
 Surround	 Shift + Eject / Surround	 Mute	 Mute / Dimmer
 Advanced	 Text / Goto	 Vol-	 Vol-
 Sound	 Sound / Title	 Vol+	 Vol+
 <</<I/<II	 << / Tune-		
 Play	 Play / Slow		
 >>/I>/II>	 >> / Tune+		
 I<<	 I<< / Preset-		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 >>I	 >>I / Preset+		
 Power Tv	 Shift + Power		

