



Original	Replacement
Receiver Power	Power
Input Select-	CH- / Page-
Input Select+	CH+ / Page+
TV Control Input	Shift + AV / Input / RDS
TV Control Power	Shift + Power
BD	2
TV	1
DVR	5
TV Control CH+	Shift + CH+ /
CD	3
CD-R	9
TUNER	6
TV Control CH-	Shift + CH- /
VIDEO	4
AUX	7
TV Control Vol+	Shift + Vol+
iPod USB	8

Original	Replacement
Dimmer	Shift + Mute / Dimmer
Signal Sel	Picture / Format
TV Control Vol-	Shift + Vol-
Auto / Direct	Red / Netflix / Search
Stereo / ALC	Green / APP / Repeat
Standard	Yellow / YouTube / Repeat
Adv Surr	Blue / Prime Video / Random
Audio	Audio / Lang I/II
Master	Vol+
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Master Volume-	Vol-
Setup	Setup / OPT /
Return	Back / Return





 









 

 



 















 

 




 
 







	Original	Replacement		Original	Replacement
	Mute	 Mute / Dimmer			
	Bass-	 I<< / Preset-			
	Bass+	 >>I / Preset+			
	Tre-	 << / Tune-			
	Tre+	 >> / Tune+			
	Display	 Display / Media			
	S.Retriever	 Sound / Title			
	EQ	 Subtitle / EQ			
	CH Select	 Shift + OK			
	Sleep	 Sleep / Timer			
	SB CH	 Zoom / Size			
	Phase	 TV/Radio /			
	CH Level+	 Shift + Up			
	Midnight	 Text / Goto			
	Speakers	 Eject / Surround			
	CH Level-	 Shift + Down			





Original		Replacement		Original		Replacement	
	Power Source		Power		1		1
	Tuner		Shift + 6		2		2
	Menu		Menu / Home		3		3
	Master Volume		Vol+		Display		Display / Media
	Tune+		>> / Tune+		4		4
	Tune+		Up		5		5
	Preset-		I<< / Preset-		6		6
	Preset-		Left		7		7
	Enter		OK		8		8
	Preset+		>>I / Preset+		9		9
	Preset+		Right		0		0
	Tune-		<< / Tune-				
	Tune-		Down				
	Master Volume		Vol-				
	Search		Red / Netflix / Search				
	Band		Subtitle / EQ				
	Mute		Mute / Dimmer				





Original		Replacement		Original		Replacement	
	iPod USB		8				
	Top Menu		D.Menu / Top				
	Master Volume		Vol+				
	Master Volume		Vol-				
	iPod CTRL		Setup / OPT /				
	Pause		Pause / Step / Freeze				
	Play		Play / Slow				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				







 



 

 

 

 

 







 

 
 
 
 




Original	Replacement
Receiver Power	Power
Input Select-	CH- / Page-
Input Select+	CH+ / Page+
TV Control Input	Shift + AV / Input / RDS
TV Control Power	Shift + Power
BD	2
TV	1
DVR	5
TV Control CH+	Shift + CH+ /
CD	3
CD-R	9
TUNER	6
TV Control CH-	Shift + CH- /
VIDEO	4
AUX	7
TV Control Vol+	Shift + Vol+
iPod USB	8

Original	Replacement
Dimmer	Shift + Mute / Dimmer
Signal Sel	Picture / Format
TV Control Vol-	Shift + Vol-
Auto / Direct	Red / Netflix / Search
Stereo / ALC	Green / APP / Repeat
Standard	Yellow / YouTube / Repeat
Adv Surr	Blue / Prime Video / Random
Audio	Audio / Lang I/II
Master	Vol+
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Master Volume-	Vol-
Setup	Setup / OPT /
Return	Back / Return





Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Bass-		l<< / Preset-
	Bass+		>>l / Preset+
	Tre-		<< / Tune-
	Tre+		>> / Tune+
	Display		Display / Media
	S.Retriever		Sound / Title
	EQ		Subtitle / EQ
	CH Select		Shift + OK
	Sleep		Sleep / Timer
	SB CH		Zoom / Size
	Phase		TV/Radio /
	CH Level+		Shift + Up
	Midnight		Text / Goto
	Speakers		Eject / Surround
	CH Level-		Shift + Down

Original	Replacement	Original	Replacement

