
 

















 







 
 



 












Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PC	 Guide / EPG / -/--
 [i+]/Info	 Display / Media
 Tv/DTV	 TV/Radio /
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-

Original	Replacement
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Home	 Menu / Home
 Exit	 Exit / Cancel / Clear
 EPG/DVD Top	 D.Menu / Top
 Return	 Back / Return
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Red/Rec	 Red / Netflix / Search
 Green/Pause	 Green / APP / Repeat
 Yellow/Stop	 Yellow / YouTube / Repeat
 Blue/Play	 Blue / Prime Video / Random
 [=]/>>	 Text / Goto
 [=i]/<<	 Info / Angle











 







 



 







 









































Original	Replacement
[=?]/>>	TITLE / SOUND Sound / Title
[TIMER / SLEEP Sleep / Timer
[...]/ <<	EQ / SUBTITLE Subtitle / EQ
[<>]/[=◆]/HDD	SIZE / ZOOM Zoom / Size
I-II/Disc Navi	LANG I/II / AUDIO Audio / Lang I/II
[II]	FORMAT / PICTURE Picture / Format
[←]	PC / FAV MARKER Fav / Marker / PC
[↔]	OPT-TOOLS / SETUP Setup / OPT /
Input 1	SHIFT + TV 1 Shift + 1
Input 2	SHIFT + DVD 2 Shift + 2
Input 3	SHIFT + CD-STB 3 Shift + 3
Input 4	SHIFT + VIDEO 4 Shift + 4
Input 5	SHIFT + TAPE 5 Shift + 5

Original	Replacement









Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV / Input / RDS
 1	 1	 Mute	 Mute / Dimmer
 2	 2	 Vol +	 Vol+
 3	 3	 Vol -	 Vol-
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Enter	 OK
 9	 9	 Home	 Menu / Home
 0	 0	 Return	 Back / Return
 PC	 Guide / EPG / -/--	 EPG/DVD Top	 D.Menu / Top
 Input 1	 Shift + 1	 Play	 Play / Slow
 Input 2	 Shift + 2	 Stop	 Stop / Hold
 Input 3	 Shift + 3	 Pause	 Pause / Step / Freeze
 Input 4	 Shift + 4	 >>	 >> / Tune+
 Input 5	 Shift + 5	 <<	 << / Tune-









 

 

 

 

 



 



 












Original
Replacement

	>>		>> / Preset+
	<<<		<<< / Preset-

Original
Replacement









 

 

 

 

 

 















 
















 






 



Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PC	 Guide / EPG / -/--
 [i+]/Info	 Info / Angle
 Input 1	 Shift + 1
 Input 2	 Shift + 2
 Input 3	 Shift + 3

Original	Replacement
 Input 4	 Shift + 4
 Input 5	 Shift + 5
 Mute	 Mute / Dimmer
 Vol +	 Vol+
 Vol -	 Vol-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Home	 Menu / Home
 Exit	 Exit / Cancel / Clear
 EPG/DVD Top	 D.Menu / Top
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Return	 Back / Return





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Guide / EPG / -/--
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	Input 5		Shift + 5
	Vol+		Vol+
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	Mute		Mute / Dimmer
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	>>		>> / Tune+
	<<		<< / Tune-

