



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Shift + Guide / EPG / -/--	Shift + Guide / EPG / -/--
Recall	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat

Original	Replacement
Blue	Blue / Prime Video / Random
Source	AV / Input / RDS
Vol+	Vol+
Vol-	Vol-
CH+	CH+ / Page+
CH-	CH- / Page-
Audio	Audio / Lang I/II
Aspect	Eject / Surround
Display	Display / Media
Tv/Radio	TV/Radio /
Rec	Rec / Rec Mode
Up	Up
Left	Left
OK/CH List	OK
Right	Right
Down	Down
Menu	Menu / Home





Original		Replacement	
	Exit		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Text		Text / Goto
	PVR/Hold		Setup / OPT /
	Size		Zoom / Size
	FAV		Fav / Marker / PC
	Play		Play / Slow
	Pause/Timeshift		Pause / Step / Freeze
	Stop/Auto		Stop / Hold
	Reveal		D.Menu / Top
	Subtitle		Subtitle / EQ
	<</Nicam		<< / Tune-
	>>/Freeze		>> / Tune+
	I<</Index		I<< / Preset-

Original		Replacement	
	>>I/Subpage		>>I / Preset+

