



| Original  |          | Replacement   |                           | Original  |        | Replacement   |                            |
|---|----------|---|---------------------------|---|--------|---|----------------------------|
|    | Power    |    | Power                     |    | Menu   |    | Menu / Home                |
|    | Mute     |    | Mute / Dimmer             |    | Exit   |    | Exit / Cancel / Clear      |
|    | Nicam/A2 |    | Shift + Audio / Lang I/II |    | 1      |    | 1                          |
|    | Sleep    |    | Sleep / Timer             |    | 2      |    | 2                          |
|    | Aspect   |    | Shift + Picture / Format  |    | 3      |    | 3                          |
|    | Media    |    | Shift + Display / Media   |    | 4      |    | 4                          |
|    | Display  |    | Display / Media           |    | 5      |    | 5                          |
|    | Auto     |    | Smart / List              |    | 6      |    | 6                          |
|    | P.Mode   |    | Picture / Format          |    | 7      |    | 7                          |
|   | S.Mode   |   | Sound / Title             |   | 8      |   | 8                          |
|  | DTV      |  | D.Menu / Top              |  | 9      |  | 9                          |
|  | Source   |  | AV / Input / RDS          |  | 0      |  | 0                          |
|  | Up       |  | Up                        |  | -/--   |  | Shift + Guide / EPG / -/-- |
|  | Left     |  | Left                      |  | Recall |  | Back / Return              |
|  | Enter    |  | OK                        |  | CH+    |  | CH+ / Page+                |
|  | Right    |  | Right                     |  | Info   |  | Info / Angle               |
|  | Down     |  | Down                      |  | Audio  |  | Audio / Lang I/II          |





| Original  | Replacement   | Original   | Replacement   |
|---|---|--|---|
|  Vol+          |  Vol+                    |  Stop       |  Stop / Hold                 |
|  CH-           |  CH- / Page-             |  Rec/Repeat |  Rec / Rec Mode              |
|  FAV           |  Fav / Marker / PC       |  Rec/Repeat |  Shift + Green / APP /       |
|  Tv/Radio      |  TV/Radio /              |  T-Shift    |  Eject / Surround            |
|  Vol-          |  Vol-                    |  Red        |  Red / Netflix / Search      |
|  Text          |  Text / Goto             |  Green      |  Green / APP / Repeat        |
|  EPG           |  Guide / EPG / -/--      |  Yellow     |  Yellow / YouTube / Repeat   |
|  Subtitle      |  Subtitle / EQ           |  Cyan       |  Blue / Prime Video / Random |
|  Index         |  Setup / OPT /           |  |   |
|  <</Hold       |  << / Tune-              |  |   |
|  <</Hold      |  Shift + Stop /         |  |   |
|  Size        |  Zoom / Size           |  |   |
|  >>          |  >> / Tune+            |  |   |
|  I<</Reveal  |  I<< / Preset-         |  |   |
|  >>I/Subpage |  >>I / Preset+         |  |   |
|  Play        |  Play / Slow           |  |   |
|  Pause       |  Pause / Step / Freeze |  |   |

