



 

 





 



 









 

 









 











 



 

 



 




 






Original	Replacement	Original	Replacement
 PWR	 Power	 Yellow/FAV	 Yellow / YouTube / Repeat
 Tv/Rad	 TV/Radio /	 Blue/A-Z	 Blue / Prime Video / Random
 Text	 Text / Goto	 Menu	 Menu / Home
 1	 1	 EPG	 Guide / EPG / -/-
 2	 2	 Info	 Info / Angle
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 Exit	 Exit / Cancel / Clear
 Back	 Back / Return	 Page+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Page-	 CH- / Page-
 Red/Opt	 Red / Netflix / Search	 Pause	 Pause / Step / Freeze
 Green/AV+	 Green / APP / Repeat	 Play	 Play / Slow

Original	Replacement	Original	Replacement
 PWR	 Mute / Dimmer	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 OK			
 EXIT			
 VOL+	 SMART	 MEDIA	 CH PAGE
 VOL-	 DISPLAY	 TV	 DVD
 EXIT	 CD - STB	 1	 2
 Page+	 VIDEO	 3	 TUNER
 Page-	 TAPE	 4	 5
 PAUSE	 AUX - HDD	 6	 TUNER
 PLAY	 USB	 7	 BLUETOOTH
 SLOW	 HDMI - SAT	 8	 FC
 TV	GUIDE EPG	9	FAV MARKER
MUTE	NETFLIX	0	SEARCH
Opl	APP	REPEAT	REPEAT A-B
AV+	REPEAT	RANDOM	





	Original	Replacement
	<<	<< / Tune-
	Stop	Stop / Hold
	>>	>> / Tune+
	Rec	Rec / Rec Mode
	Slow	+ Shift + Play /
	List	Smart / List
	A-B	D.Menu / Top
	Mark	Fav / Marker / PC
	Jump	Subtitle / EQ
	PIP	Zoom / Size
	Swap	Setup / OPT /
	Move	Display / Media
	Sleep	Sleep / Timer

Original	Replacement

