



 



 

 



 

 

 

 

 

 

 



 







Original	Replacement
	 Power
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Info / Angle
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+

Original	Replacement
	 Vol-
	 Picture / Format
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Display / Media
	 Up
	 Left
	 OK
	 Right
	 Back / Return
	 Shift + Back / Return
	 Down
	 Exit / Cancel / Clear





Original		Replacement	
	AD		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Radio		TV/Radio /
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>		>>  / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Original		Replacement	

