



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	List		Shift + Smart / List
	Vol+		Vol+
	TV		TV/Radio /
	P+		CH+ / Page+

Original	Replacement	Original	Replacement
	Vol-		Vol-
	Smart		Smart / List
	P-		CH- / Page-
	Home		Shift + Menu /
	Up		Up
	=		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	←		Back / Return
	Down		Down
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Zoom		Zoom / Size
	*		D.Menu / Top
	Info		Info / Angle
	EPG		Guide / EPG / -/-



