 

 





 



 

 





 
 




 

 

 

 

 

 

 



 













 




 
 

 







Original	Replacement	Original	Replacement
 Power	 Power	 [=]/Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 [=]/Text	 Text / Goto	 Up	 Up
 Play	 Play / Slow	 Left	 Left
 Pause	 Pause / Step / Freeze	 Enter	 OK
 [=+]	 Shift + Stop /	 Right	 Right
 Stop/Still	 Stop / Hold	 Down	 Down
 Radio	 TV/Radio /	 [=i]/Info	 Info / Angle
 Format	 Picture / Format	 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-	 Vol+	 Vol+
 Red	 Red / Netflix / Search	 Index	 Setup / OPT /
 >>	 >> / Tune+	 CH+	 CH+ / Page+
 Green	 Green / APP / Repeat	 Vol-	 Vol-
 I<<	 I<< / Preset-	 List	 Smart / List
 Yellow	 Yellow / YouTube / Repeat	 CH-	 CH- / Page-
 >>I	 >>I / Preset+	 1	 1
 Blue	 Blue / Prime Video / Random	 2	 2





Original	Replacement	Original	Replacement
3	3	Rec	Rec / Rec Mode
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
O)/Audio	Audio / Lang I/II		
0	0		
DVB	Display / Media		
Fav ♥	Fav / Marker / PC		
Sleep	Sleep / Timer		
EPG	Guide / EPG / -/--		
Back	Back / Return		
[≡x]	D.Menu / Top		
[≡o]/Subtitle	Subtitle / EQ		
USB	+  Shift + 8		

Original	Replacement	Original	Replacement
Rec	Rec / Rec Mode		

