






Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Subtitle / EQ
	 Zoom / Size
	 D.Menu / Top
	 Setup / OPT /
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Up

Original	Replacement
	 Info / Angle
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4





	Original	Replacement	Original	Replacement
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	Guide	Guide / EPG / -/--		
	0	0		
	Red/A	Red / Netflix / Search		
	Green/B	Green / APP / Repeat		
	Yellow/C	Yellow / YouTube / Repeat		
	Blue/D	Blue / Prime Video / Random		
	Return	Shift + Back / Return		

