



Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	TV		TV/Radio /		Source		AV / Input / RDS
	1		1		PR-		CH- / Page-
	2		2		CH List		Smart / List
	3		3		Menu		Menu / Home
	4		4		FAV CH		Fav / Marker / PC
	5		5		Tools		Setup / OPT /
	6		6		Return		Shift + Back / Return
	7		7		Up		Up
	8		8		Left		Left
	9		9		Enter		OK
	[]		Display / Media		Right		Right
	0		0		Info		Info / Angle
	PRE-CH		Back / Return		Down		Down
	Vol+		Vol+		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	PR+		CH+ / Page+		Green		Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow Yellow / YouTube / Repeat		
	Blue Blue / Prime Video / Random		
	TTX/MIX Text / Goto		
	SRS Sound / Title		
	P.Size Zoom / Size		
	Dual/I/II Audio / Lang I/II		
	Guide Guide / EPG / -/--		
	Subt Subtitle / EQ		
	<< << / Tune-		
	Pause Pause / Step / Freeze		
	>> >> / Tune+		
	Rec Rec / Rec Mode		
	Play Play / Slow		
	Stop Stop / Hold		

