



 



 

 











 



 



 



 



 





















 


 





 

 




Original		Replacement		Original		Replacement	
	Power		Power		Mute		Mute / Dimmer
	TV/DTV		TV/Radio /		PR+		CH+ / Page+
	Source		AV / Input / RDS		PR-		CH- / Page-
	1		1		Guide		Guide / EPG / -/--
	2		2		Menu		Menu / Home
	3		3		CH.List		Smart / List
	4		4		Tools		Setup / OPT /
	5		5		Return		Shift + Back / Return
	6		6		Info		Info / Angle
	7		7		Exit		Exit / Cancel / Clear
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	-/--		Shift + Guide / EPG / -/--		Left		Left
	PRE-CH		Back / Return		Enter		OK
	Vol+		Vol+		Red		Red / Netflix / Search
	Vol-		Vol-		Green		Green / APP / Repeat





	Original	Replacement	Original	Replacement
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		
	 TTX/MIX	 Text / Goto		
	 P.Size	 Zoom / Size		
	 DMA	 Audio / Lang I/II		
	 HDMI	 Shift + 0		
	 E.Mode	 D.Menu / Top		
	 Subt	 Subtitle / EQ		
	 <<	 << / Tune-		
	 Pause	 Pause / Step / Freeze		
	 >>	 >> / Tune+		
	 Rec	 Rec / Rec Mode		
	 Play	 Play / Slow		
	 Stop	 Stop / Hold		

