 
 
 

 

 
 
 

 

 

 

 

 

 

 

 



 

 

 

 

 

 

 

 

 


 
 

 

 

 

 



 





 





Original	Replacement	Original	Replacement
 Power	 Power	 Tools	 Setup / OPT /
 TV	 TV/Radio /	 Return	 Shift + Back / Return
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 CH List	 Smart / List
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 FAV CH	 Fav / Marker / PC	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 PRE-CH	 Back / Return	 Vol+	 Vol+
 Info	 Info / Angle	 Source	 AV / Input / RDS
 Menu	 Menu / Home	 PR+	 CH+ / Page+
 Guide	 Guide / EPG / -/--	 Vol-	 Vol-





Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	TTX/MIX		Text / Goto
	Media.P		Display / Media
	P.Size		Zoom / Size
	Dual I-II		Audio / Lang I/II
	AD		Sound / Title
	Subt.		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Original	Replacement	Original	Replacement

