



Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 V+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Replacement
 V-	 Vol-
 World/Internet	 Smart / List
 P-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Music/Camera	 Display / Media
 TV Guide	 Guide / EPG / -/-
 */O	 Shift + 1
 */Q	 Shift + 2





Original	Replacement	Original	Replacement
 [≡]/Text	 GOTO TEXT Text / Goto		
 Red	 NETFLIX SEARCH Red / Netflix / Search		
 Green	 APP REPEAT Green / APP / Repeat		
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
 Blue	 Prime Video RANDOM Blue / Prime Video / Random		
 LANG. Lang	 LANG I/II AUDIO Audio / Lang I/II		
 [≡]..	 TITLE SOUND Sound / Title		
 [-O-]	 OPT-TOOLS SETUP Setup / OPT /		
 <<	 TUNE- << / Tune-		
 Pause	 STEP-FREEZE Pause / Step / Freeze		
 >>	 TUNE+ >> / Tune+		
 Rec	 REC MODE Rec / Rec Mode		
 ▶ Play	 SLOW ▶ Play / Slow		
 ■ Stop	 HOLD ■ Stop / Hold		

