 










 


 








 

 
 

 



 



 

















Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Open/Close	 Eject / Surround	 CD Ripping	 Text / Goto
 Dimmer	 Shift + Mute / Dimmer	 0	 0
 On/Off Timer	 Shift + Sleep / Timer	 Shuffle	 Blue / Prime Video / Random
 DVD	 Shift + 2	 I<<	 I<< / Preset-
 Tuner	 Shift + 6	 Step	 Shift + Pause / Step /
 Timer/Clock	 Picture / Format	 Pause	 Pause / Step / Freeze
 Port	 Shift + 3	 >>I	 >>I / Preset+
 AUX	 Shift + 7	 <<	 << / Tune-
 1/RDS Display	 1	 Stop	 Stop / Hold
 2	 2	 Play	 Play / Slow
 3/TA	 3	 >>	 >> / Tune+
 4/PTY-	 4	 Vol+	 Vol+
 5/PTY Search	 5	 Mute	 Mute / Dimmer
 6/PTY+	 6	 Tuning Up	 CH+ / Page+
 7	 7	 Vol-	 Vol-
 8	 8	 Audio	 Audio / Lang I/II





Original	Replacement	Original	Replacement
 Tuning Down	 CH- / Page-	 P.Bass	 Fav / Marker / PC
 Menu	 Menu / Home	 Sleep	 Sleep / Timer
 Up	 Up	 Slow	 Shift + Play /
 Return	 Back / Return	 Angle	 Shift + Info / Angle
 Left	 Left	 Remain	 Smart / List
 Enter	 OK	 Mo/St	 Setup / OPT /
 Right	 Right	 Zoom	 Zoom / Size
 Info	 Info / Angle	 Cancel	 Shift + Exit / Cancel / Clear
 Down	 Down	 Demo	 D.Menu / Top
 Exit	 Exit / Cancel / Clear		
 Repeat	 Green / APP / Repeat		
 A-B Repeat	 Yellow / YouTube / Repeat		
 Tuner Memory	 Rec / Rec Mode		
 Subtitle	 Subtitle / EQ		
 DSP/EQ	 Display / Media		
 P.Sound	 Sound / Title		
 Treb/Bass	 TV/Radio /		

