


 


 

 





Original		Replacement		Original		Replacement	
	Power		Power		>>I		>>I
	Source		AV		<<		<<
	Open/Close		Eject		>>		>>
	Sleep		Sleep		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		Vol+		Vol +
	4		4		Vol-		Vol -
	5		5		Mute		Mute
	6		6		Repeat		Text
	7		7		Tuning+		Ch +
	8		8		Tuning-		Ch -
	9		9		Disc Menu		D. Menu
	0		0		Menu		Menu
	Dolby PL		Dual		Title Menu		TV/R
	DSP/EQ		Guide		Tools		Options
	I<<		I<<		Info		Info





Original		Replacement		Original	Replacement
	Return		Back		
	Exit		Exit		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	Enter		Ok		
	Red		Red		
	Green/Tuner		Green		
	Yellow/MO/ST		Yellow		
	Blue/CD Ripping		Blue		
	Dimmer		Subt		
	S.Vol		Format		
	P.Bass/Audio Upscale		3D		





Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause
 Function Tv	 AV	 Vol+	 Vol +
 Sleep	 Sleep	 Vol-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Menu	 Menu
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 <<	 <<	 Right	 Right
 >>	 >>	 Left	 Left
 Stop	 Stop	 Enter	 Ok
 Play	 Play	 Red	 Red





Original	Replacement	Original	Replacement
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

