



Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Guide
	TV		Pre Ch
	CH.MGR		TV/R
	Sleep		Back
			Sleep

Original	Replacement	Original	Replacement
	PC		Media
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	[≡+]/PIP		3D
	[≡?]/Info		Info
	[≡]/[≡]/TTX/MIX		Text
	Red-/I/I-/P.Mode		Red





Original		Replacement		Original	Replacement
	Green/-I-I-/S.Mod e		Green		
	Yellow/Still		Yellow		
	Blue/P.Size		Blue		
	[≡♦]/Source		Shift + AV		
	[≡◇]/Swap		Options		
	Size		Format		
	I-II/Dual		Dual		
	(o)/SRS		Subt		
	[←]/Position		Smart		
	P Up		>>		
	P Down		<<		

