



 





 

















 



 

 





Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Setup	 Setup / OPT /
 3D	 Picture / Format
 Zoom	 Zoom / Size
 Book Mark	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Mode	 Text / Goto
 Clear	 Exit / Cancel / Clear
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Return	 Back / Return
 Display	 Display / Media
 Up	 Up
 Down	 Down
 Left	 Left





Original	Replacement	Original	Replacement
 Right	 Right		
 Enter	 OK		
 Step	 +  Shift + Pause / Step /		
 Audio	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Angle	 Info / Angle		

