





 

 

 


 
 

 

 

















 



 







 

 

 

 

 





 

 


















 

 




 












Original	Replacement	Original	Replacement
 Power	 Power	 I<<	 I<< / Preset-
 DVD	 Shift + 2	 Stop	 Stop / Hold
 Tuner Band	 Shift + 6	 Play / Pause	 Play / Slow
 Aux	 Shift + 7	 Play / Pause	 Pause / Step / Freeze
 Open / Close	 Eject / Surround	 >>I	 >>I / Preset+
 Title	 Shift + Title / Sound / Title	 << / Tuning	 << / Tune-
 Menu	 Menu / Home	 >> / Tuning Up	 >> / Tune+
 TV / Video	 AV / Input / RDS	 Up	 Up
 TV Power	 Shift + Power	 Left	 Left
 Audio Mo/St	 Audio / Lang I/II	 Enter	 OK
 Subtitle	 Subtitle / EQ	 Right	 Right
 TV Channel -	 Shift + CH- /	 Down	 Down
 TV Channel +	 Shift + CH+ /	 Volume -	 Vol-
 Display	 Display / Media	 Volume +	 Vol+
 Return	 Back / Return	 DSP/PLII Mode	 CH+ / Page+
 TV Volume -	 Shift + Vol-	 DSP/PLII Effect	 CH- / Page-
 TV Volume +	 Shift + Vol+	 Mute	 Mute / Dimmer





Original	Replacement
 Sleep	 Sleep / Timer
 1 / RDS Display	 1
 2	 2
 3 / TA	 3
 Sound Edit	 Sound / Title
 4 / PTY -	 4
 5 / PTY Search	 5
 6 / PTY +	 6
 SPK Mode	 Smart / List
 7	 7
 8	 8
 9	 9
 Pro Logic II	 Shift + Audio / Lang I/II
 Slow	 Shift + Play /
 0	 0
 Setup	 Setup / OPT /
 Test Tone	 Shift + Text / Goto

Goto

Original	Replacement
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 DRC	 D.Menu / Top
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Program	 TV/Radio /
 Step	 Shift + Pause / Step /
 Go To	 Text / Goto
 Remain	 Picture / Format

