



Original	Replacement
	 Power
	 [i]/Info
	 Mute
	 I-II
	 OK/Select
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Shift + Guide
	 Exit

Original	Replacement
	 Menu
	 Red
	 Green
	 Yellow
	 Blue
	 Up
	 Down
	 Right
	 Left
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 Play
	 Pause
	 Stop
	 <<



 
 
 




Original		Replacement		Original		Replacement	
	>>		>>				
	[TV]		TV/R				
	D-Menu		Smart				
	TV		Media				
	AV		AV				
	P<P		Pre Ch				
	PP		D. Menu				
	[≡]		Text				
	[≡o]		Subt				
	[≡+]		Format				
	[≡x]		3D				
	[≡◆]/Wide	+	Shift + Format				
	[≡?]		Options				
	[≡i]/Guide		Guide				
	[::]/Subtitle		Back				




 

 





 












Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/+10		Guide
	Exit		Exit
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio		Shift + Yellow
	Blue/Angle		Blue

Original	Replacement	Original	Replacement
	Stop		Stop
	Play		Play
	Pause		Pause
	D-Menu		Smart
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Time		Shift + AV
	Zoom		Shift + Eject
	Program		Sleep
	Search Mode		AV
	Repeat		Text
	A-B		Shift + Play
	C		Yellow
	Title		Info
	Display		Shift + Info





Original		Replacement		Original		Replacement	
	Open/Close		Eject				
	Menu		Menu				
	Select		Ok				
	Up		Up				
	Down		Down				
	Left		Left				
	Right		Right				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				

