



Original		Replacement		Original		Replacement	
	Power		Power		Display		Info
	Mute		Mute		CH +		Ch +
	1		1		CH -		Ch -
	2		2		Up		Up
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		LCD Menu		Menu
	8		8		Exit		Exit
	9		9		Input		AV
	0		0		PMode		Shift + Format
	-/-		Guide		SMode		Shift + Dual
	Recall		Back		Sleep		Sleep
	Vol +		Vol +		Fav		Pre Ch
	Vol -		Vol -		Fav -		Shift + Down
	Nicam		Smart		Fav +		Shift + Up





Original	Replacement	Original	Replacement
 Aspect	 Format		
 Play/Pause / Text	 Play		
 Play/Pause / Text	 Pause		
 Play/Pause / Text	 Text		
 Stop / Hold	 Stop		
 Lang	 Dual		
 Subtitle	 Subt		
 >> / Index	 >>		
 << / Size	 <<		
 >>I / Reveal	 >>I		
 I<< / Subpage	 I<<		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

