

















| Original | Replacement | Original | Replacement |
|---|--|--|---|
|  Power |  Power |  CH+ |  CH+ / Page+ |
|  Mute |  Mute / Dimmer |  Vol- |  Vol- |
|  1 |  1 |  Source |  AV / Input / RDS |
|  2 |  2 |  CH- |  CH- / Page- |
|  3 |  3 |  Up |  Up |
|  4 |  4 |  Left |  Left |
|  5 |  5 |  OK |  OK |
|  6 |  6 |  Right |  Right |
|  7 |  7 |  Exit |  Exit / Cancel / Clear |
|  8 |  8 |  Down |  Down |
|  9 |  9 |  Menu |  Menu / Home |
|  PR List |  Smart / List |  Aspect |  Shift + Picture / Format |
|  0 |  0 |  Sleep |  Sleep / Timer |
|  Recall |  Back / Return |  Info/Display |  Info / Angle |
|  Vol+ |  Vol+ |  I/II/Nicam |  Shift + Audio / Lang I/II |
|  P.Mode |  Picture / Format |  DVD/USB |  Shift + 2 |
|  S.Mode |  Sound / Title |  Text |  Text / Goto |





| Original | Replacement |
|------------------|-----------------------------------|
| Subtitle | Subtitle / EQ |
| Size | Zoom / Size |
| Play/Pause/Index | Play / Slow |
| Stop/Reveal | Stop / Hold |
| Step/Subpage | Pause / Step / Freeze |
| Open/Close/Hol | Eject / Surround |
| I<</FAV | I<< / Preset- |
| >>ITv/Radio | Shift + >> / |
| <</Audio | << / Tune- |
| >>/EPG | >> / Tune+ |
| Red/Prog | Red / Netflix / Search |
| Green/Zoom | Green / APP / Repeat |
| Yellow/Title | Yellow / YouTube / Repeat |
| Blue/DVD-Setup | Blue / Prime Video / Random |
| DVD-Menu | D.Menu / Top |
| Repeat | Shift + Green / APP / Repeat |
| A-B | Shift + Yellow / YouTube / Repeat |

| Original | Replacement |
|----------|-------------------|
| DVD-Lang | Audio / Lang I/II |

