
 
 



 
 

 
 

 



 



 
 


 

 


 
 



 


Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	3.*	 +  Shift + Guide
9	 9	Surround	 +  Shift + Red
Guide -/-- 1.	 GUIDE	Nicam/Mono	 +  Shift + Green
0/10	 0	Level L	 +  Shift + Yellow
2.Fav P/C 2.	 PRE-CH	Level R/Woofer	 +  Shift + Blue
Red	 A		
Green	 B		
Yellow	 C		
Blue	 D		
Off/Tim	 +  Shift + 3D		
On/Tim	 ECO 3D		
Tone-	 +  Shift + Vol +		
Contrast+	 +  Shift + Ch +		
Audio-	 +  Shift + Vol -		
Color+ P.Std	 PICTURE FORMAT		
Color- S.Std	 +  Shift + Dual		
Contrast-	 +  Shift + Ch -		

