

 





Original	Replacement	Original	Replacement
 Mute	 Mute	 Left	 Left
 Power	 Power	 Enter	 Ok
 Subtitle	 Subt	 Stop	 Stop
 Language	 Dual	 L / R	 3D
 Open / Close	 Eject	 1	 1
 Angle	 Format	 2	 2
 Prog	 Sleep	 Goto	 Media
 Title	 List	 3	 3
 Menu	 Menu	 4	 4
 Vol +	 Vol +	 5	 5
 Vol -	 Vol -	 6	 6
 Setup	 Options	 7	 7
 Play / Pause	 Play	 8	 8
 Play / Pause	 Pause	 9	 9
 Up	 Up	 10+	 Guide
 Down	 Down	 0	 0
 Right	 Right	 << Rev	 <<

Original	Replacement	Original	Replacement
 Mute	 Mute	 TV	 AUX
 Enter	 Ok	 DVD	 SAT
 Stop	 Stop	 SOUND	 AD
 L / R	 3D	 DISC NAV	 SETTINGS
 1	 1	 LIST	 OPT
 2	 2	 DUAL	 SUBT
 3	 3	 SOUND	 PICTURE
 4	 4	 PROG	 ECO
 5	 5	 SLEEP	 3D
 6	 6	 TV/R	 TIMER
 7	 7	 FORMAT	 AV
 8	 8	 D.MENU	
 9	 9	 REPEAT	
 10+	 Guide	TEXT	
0	0	ZOOM	
<< Rev	<<	UP	





Original		Replacement		Original	Replacement
	>> Fwd		>>		
	I<< Prev		I<<		
	>>I Next		>>I		
	Display		Info		
	Slow	+	Shift + Play		
	Step	+	Shift + Pause		
	PBC		Smart		
	Zoom	+	Shift + Eject		
	Repeat		Text		
	A - B	+	Shift + Text		
	Video / Mode		TV/R		

