 



 


 











 

 








 
 

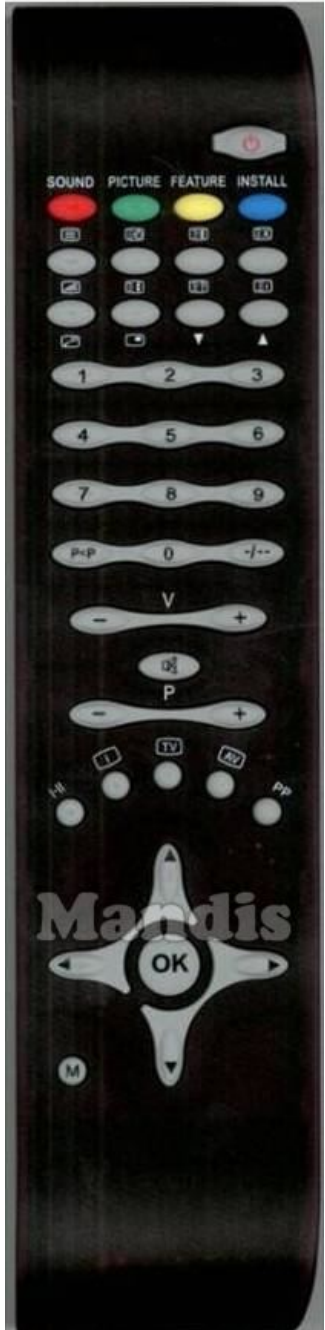


Original		Replacement		Original		Replacement	
	Power		Power		5		5
	Red/Sound		Red		6		6
	Green/Picture		Green		7		7
	Yellow/Feature		Yellow		8		8
	Blue/Install		Blue		9		9
	[≡]		Text		0		0
	[≡O]		Options		P<P		Pre Ch
	[≡+]		Format		-/--		Guide
	[≡X]		Smart		Vol+		Vol +
	[.≡]/[/■]		Subt		Vol-		Vol -
	[≡◆]/[■]		Media		Mute		Mute
	[≡?]/↓		3D		P+		Ch +
	[≡i]/↑		List		P-		Ch -
	1		1		I-II		Dual
	2		2		[i]		Info
	3		3		TV		TV/R
	4		4		AV		AV





Original	Replacement	Original	Replacement
			
			
			
			
			
			
			

