



 





 





 









 



 

 

 



 



 

 

 

 

 

 







 











Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		i/Info		Info / Angle
	1		1		PR-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Up		Up
	4		4		Q.Menu		D.Menu / Top
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	0		0		World		Smart / List
	Recall		Fav / Marker / PC		Music Photo		Display / Media
	Vol+		Vol+		Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer		*/o		Setup / OPT /
	PR+		CH+ / Page+		*/o..		Zoom / Size





Original		Replacement		Original	Replacement
	≡/Text		Text / Goto		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Lang		Audio / Lang I/II		
	[≡]..		Subtitle / EQ		
	[-O-]		Picture / Format		
	<<		<< / Tune-		
	Pause		Pause / Step / Freeze		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Play		Play / Slow		
	Stop		Stop / Hold		

