



Original		Replacement		Original		Replacement	
	Power		Power		I<<		I<< / Preset-
	Control		Setup / OPT /		Stop		Stop / Hold
	[i+]		Info / Angle		>>I		>>I / Preset+
	P.Info		Smart / List		1		1
	ATV		Shift + Smart / List		2		2
	DTV		Shift + Display / Media		3		3
	SAT		Shift + 0		4		4
	Radio		TV/Radio /		5		5
	Power Ext. Media		Shift + Power		6		6
	←		Shift + Left		7		7
	Pause		Pause / Step / Freeze		8		8
	→		Shift + Right		9		9
	Rec		Rec / Rec Mode		Recall		Fav / Marker / PC
	<<		<< / Tune-		0		0
	Play		Play / Slow		Source		AV / Input / RDS
	>>		>> / Tune+		I/II/I+II/▼/O		Audio / Lang I/II
	Rec Stop		Shift + Stop / Hold		[<>]		Picture / Format





Original	Replacement
AV Mode	Shift + AV / Input / RDS
Eco	Display / Media
Mute	Mute / Dimmer
Vol+	Vol+
P+	CH+ / Page+
[=]	Text / Goto
Vol-	Vol-
P-	CH- / Page-
Home	Menu / Home
EPG	Guide / EPG / -/--
Nothing	Eject / Surround
Up	Up
Left	Left
OK	OK
Right	Right
End	Exit / Cancel / Clear
Down	Down

Original	Replacement
Back	Back / Return
[...]	Subtitle / EQ
[=?]	D.Menu / Top
[=o]	Sleep / Timer
[=◇]	Zoom / Size
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

