



Original	Replacement
Standby	Power
Tv Operate	Shift + Power
CH+ Tv	Shift + CH+ /
Vol+ Tv	Vol+
Timer On/Off	Sleep / Timer
Input Select Tv	Shift + AV / Input / RDS
CH- Tv	Shift + CH- /
Vol- Tv	Vol-
Menu	Menu / Home
Up	Up
Set	Setup / OPT /
SV/V+/Timer	Picture / Format
Left	Left
Right	Right
Down	Down
Clear	Exit / Cancel / Clear
<</REW	<< / Tune-

Original	Replacement
Play/X2	Play / Slow
>>/FF	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Pause/Still	Pause / Step / Freeze
Tape Speed	Zoom / Size
Audio Out	Audio / Lang I/II
1	1
2	2
3	3
Mode OSD	Text / Goto
4	4
5	5
6	6
Display	Display / Media
7	7
8	8



