





























































 







Original	Replacement	Original	Replacement
On/Off	 Power	Return TV	 TV/Radio /
Mute	 Mute / Dimmer	Menu video	 D.Menu / Top
On/Off	 Play / Slow	Output	 Setup / OPT /
Update	 Pause / Step / Freeze	Text	 Text / Goto
Txt Stop	 Stop / Hold	Input	 AV / Input / RDS
Store Text	 Rec / Rec Mode	Menu	 Menu / Home
Tone-	 << / Tune-	Menu Up	 Up
Tone+	 >> / Tune+	Info	 Info / Angle
Contrast-	 I<< / Preset-	Menu Left	 Left
Contrast+	 >>I / Preset+	OK Enter	 OK
Color- S.Std	 Sound / Title	Menu Right	 Right
Menu audio	 Audio / Lang I/II	Menu Off	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Surround	 Eject / Surround	Back	 Back / Return
Color+ P.Std	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	View	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+



Original	Replacement	Original	Replacement
Volume-	 Vol-	Yellow	 Yellow / YouTube / Repeat
Disp	 Display / Media	Blue	 Blue / Prime Video / Random
Chan.Down	 CH- / Page-	Reveal	 Shift + Pause / Step /
1	 1	Tune-	 Shift + << /
2	 2	Tune+	 Shift + >> /
3	 3	Bright- Sys	 Shift + I<< / Preset-
4	 4	Bright+ Mode	 Shift + >>I / Preset+
5	 5	Nicam/Mono	 Shift + Audio / Lang I/II
6	 6	Aft/Caf	 Shift + Eject / Surround
7	 7	4.# 16:9	 Shift + Picture / Format
8	 8	TV/AV	 Shift + AV / Input / RDS
9	 9	Level L	 Shift + Left
Guide -/-- 1.	 Guide / EPG / -/--	Level R/Woofers	 Shift + Right
0/10	 0	Audio+	 Shift + Vol+
2.Fav P/C 2.	 Fav / Marker / PC	Store	 Shift + Smart / List
Red	 Red / Netflix / Search	On/Tim	 Shift + CH+ /
Green	 Green / APP / Repeat	Audio-	 Shift + Vol-



Original	Replacement	Original	Replacement
Display	 +  Shift + Display / Media		
Off/Tim	 +  Shift + CH- /		
3.*	 +  Shift + 3		
Search	 +  Shift + Red / Netflix /		

