



















 







 











 























 







Original		Replacement		Original		Replacement	
	Power		Power		Source		AV / Input / RDS
	Mute		Mute / Dimmer		Home		Menu / Home
	Play / Pause		Play / Slow		Up		Up
	Play / Pause		Pause / Step / Freeze		Down		Down
	Stop		Stop / Hold		Right		Right
	Rec		Rec / Rec Mode		Left		Left
	<<		<< / Tune-		OK		OK
	>>		>> / Tune+		Del		Exit / Cancel / Clear
	<<		I<< / Preset-		Blue / Info		Info / Angle
	>>		>>I / Preset+		Back		Back / Return
	:Q		Sound / Title		Vol+		Vol+
	TV Play		Eject / Surround		Vol-		Vol-
	Format		Picture / Format		Internet		Smart / List
	Live TV		TV/Radio /		CH+		CH+ / Page+
	≡		D.Menu / Top		CH-		CH- / Page-
	⚙		Setup / OPT /		Mouse		Display / Media
	Green / TTX		Text / Goto		1		1





	Original	Replacement	Original	Replacement
				
				
				
				
				
				
				
				
				
				
				
				
				
				
				
				

