


 



 




 
 










 




 
 
 

 






 









 


 


 

 
 
 

 









Original		Replacement		Original		Replacement	
	Power		Power		Guide		Guide
	Mute		Mute		i		Info
	NTSC / PAL		Format		Menu		Menu
	Audio		Dual		Up / CH+		Up
	TV / Radio		AV		Down / CH-		Down
	1		1		Right / Vol+		Right
	2		2		Left / Vol-		Left
	3		3		OK		Ok
	4		4		Up / CH+		Ch +
	5		5		Down / CH-		Ch -
	6		6		Right / Vol+		Vol +
	7		7		Left / Vol-		Vol -
	8		8		↑		Shift + Ch +
	9		9		↓		Shift + Ch -
	0		0		Exit		Exit
	TV / Radio		TV/R		FAV		Pre Ch
	Recall		Back		SAT		Smart





Original	Replacement	Original	Replacement
	<<		
	Play		
	>>		
	+ Shift + Stop		
	+ Shift + Pause		
	Pause		
	Stop		
	I<		
	>I		
	Rec		
	A Red		
	B Green		
	C Yellow		
	D Blue		
	Text		
	Subt		

