

























 













 








 









Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide / EPG / -/--
 Rec	 Rec / Rec Mode
 Info	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-

Original	Replacement
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 ≡	 D.Menu / Top
 Input	 AV / Input / RDS
 Smart Colors	 Display / Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 BACK	 Back / Return
 EXIT	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Home	 Menu / Home
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





	Original	Replacement		Original	Replacement
	<<	 << / Tune-			
	>>	 >> / Tune+			
	Play	 Play / Slow			
	Pause	 Pause / Step / Freeze			
	Stop	 Stop / Hold			
	Subt	 Subtitle / EQ			
	Audio	 Audio / Lang I/II			
	TXT	 Text / Goto			
	Netflix	 Shift + Red / Netflix /			
	YouTube	 Shift + Yellow / YouTube /			
	prime video	 Shift + Blue / Prime			
	Google Play	 Shift + Green / APP /			

