


 



















 



 





 

 
 

 




 

 





 

 

 

 








Original	Replacement
Pause	 Pause / Step / Freeze
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 Digest	 Display / Media
 Tv Mode	 Smart / List

Original	Replacement
 Info	 Info / Angle
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Vol-	 Vol-
 CH+	 CH+ / Page+
 Up	 Up
 Right	 Right
 Vol+	 Vol+
 OK	 OK
 Down	 Down
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search
 Language	 Shift + Audio / Lang I/II
 Green	 Green / APP / Repeat
 Audio	 Audio / Lang I/II





Original	Replacement	Original	Replacement
 PAUSE	Yellow  Yellow / YouTube / Repeat		
 TV/RADIO	 TV/RADIO /		
 TELETEXT	Blue  Blue / Prime Video / Random		
 TELETEXT	 Text / Goto		
 SUBTITLE	 Subtitle / EQ		

