




 


 

 








 


 



 
 
 
 

 


 
 

 

 



 

 

 

 

 

 

 









 

 

 

 


 

 

 

 

 

 




Original	Replacement	Original	Replacement
	 Eject / Surround		 3
	 +  Shift + Power		 +  Shift + 3
	 Power		 +  Shift + Setup / OPT / Tools
	 +  Shift + Sound / Title		 Audio / Lang I/II
	 AV / Input / RDS		 4
	 +  Shift + Mute / Dimmer		 +  Shift + 4
	 Green / APP / Repeat		 5
	 TV/Radio /		 +  Shift + 5
	 Exit / Cancel / Clear		 6
	 +  Shift + D.Menu / Top Menu		 +  Shift + 6
	 Sleep / Timer		 Picture / Format
	 Mute / Dimmer		 Info / Angle
	 Play / Slow		 7
	 1		 +  Shift + 7
	 +  Shift + 1		 8
	 2		 +  Shift + 8
	 +  Shift + 2		 9





Original	Replacement
 9 TV	 Shift + 9
 Sound Field	 Sound / Title
 Subtitle	 Subtitle / EQ
 >10	 Guide / EPG / -/--
 >10 TV	 Fav / Marker / PC
 0/10	 0
 0/10 TV	 Shift + 0
 Enter	 Shift + OK
 Display	 Display / Media
 Vol+	 Vol+
 Vol+ Tv	 Shift + Vol+
 Vol-	 Vol-
 Vol- Tv	 Shift + Vol-
 I<<	 I<< / Preset-
 I<< TV	 Shift + I<< / Preset-
 >>I	 >>I / Preset+
 >>I TV	 Shift + >>I / Preset+

Original	Replacement
 <<	 << / Tune-
 >>	 >> / Tune+
 Play/Select	 Shift + Play /
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 DVD Display	 Shift + Display / Media
 DVD Top Menu	 Menu / Home
 Up	 Up
 DVD Menu	 D.Menu / Top
 Return	 Back / Return
 Left	 Left
 OK	 OK
 Enter TV	 Shift + Down
 Right	 Right
 DVD Setup	 Setup / OPT /
 AMP Menu	 Shift + Menu /
 Down	 Down

