 

 





 

 

 

 

 





 





 





 





 

 

 

 

 
 
 
 
 



















Original	Replacement	Original	Replacement
	Input		AV / Input / RDS
	Sync Menu		D.Menu / Top
	Power		Power
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	<<		<< / Preset-
	Stop		Stop / Hold
	>>		>>  / Preset+
	Digital/Analog		Display / Media
	[+]		Zoom / Size
	Scene		Smart / List
	Audio		Audio / Lang I/II
	Guide		Guide / EPG / -/--
	[i+]/[?]		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Options		Setup / OPT /
	Home		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Original		Replacement		Original		Replacement	
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
[≡]	[≡]/Text	GOTO TEXT	Text / Goto				
0	0	HDMI - BAT 0	0				
[...]	[...]	EQ SUBTITLE	Subtitle / EQ				
+	Vol+	+ VOL	Vol+				
+	CH+	+ CH PAGE	CH+ / Page+				
-	Vol-	- VOL	Vol-				
-	CH-	- CH PAGE	CH- / Page-				
[Mute]	Mute	DIMMER MUTE	Mute / Dimmer				
[Recall]	Back/Recall	PC FAV MARKER	Fav / Marker / PC				

