

 





 

 


 
 
 

 

 



 

 
 
 

 


 



 





 

 






 
 

 
 



Original	Replacement
 Power	 Power
 Input	 AV
 Digital/Analog	 3D
 TV/Radio	 TV/R
 Exit	 Exit
 EXT.Box Menu	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]/[?]	 INFO

Original	Replacement
 [≡]	 Text
 Google Play	 Shift + Smart
 Netflix	 Media
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Guide	 Guide
 Action Menu	 Menu
 APPS	 Shift + Media
 Back	 Back
 TV	 Options
 Home	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original	Replacement	Original	Replacement
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Recall		Pre Ch
	Prog+		Ch +
	Prog-		Ch -
	Audio		Dual
	<<		<<
	Play		Play
	>>		>>
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Stop		Stop
	[...]		Subt

