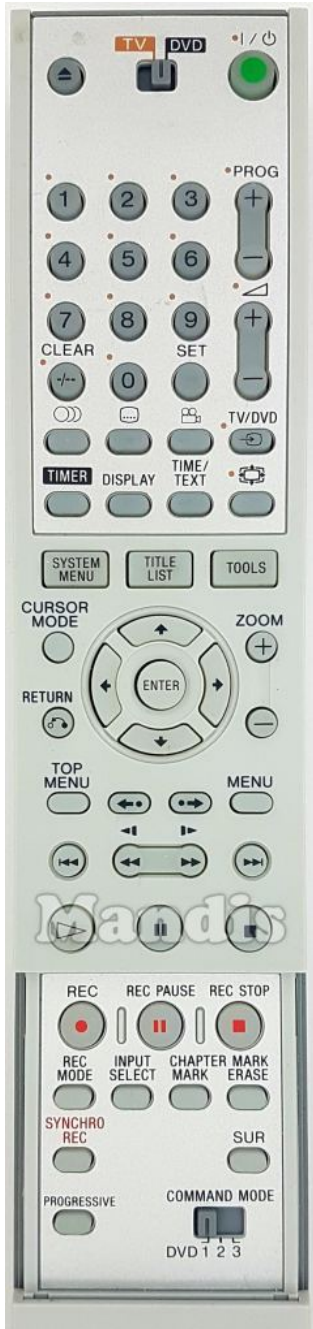 

 

 


 



Original	Replacement	Original	Replacement
Power	Power	Set	D. Menu
Open/Close	Eject	O))	Dual
Prog+	Ch +	[...]	Subt
Prog-	Ch -	Camera	Green
Vol+	Vol +	Input/Tv/DVD	TV/R
Vol-	Vol -	Timer	AV
1	1	Display	Info
2	2	Time/Text	Text
3	3	[+]	Format
4	4	System Menu	Media
5	5	Tools	Options
6	6	Title List	List
7	7	Cursor Mode	Exit
8	8	Return	Back
9	9	Zoom+	Blue
0	0	Zoom-	Yellow
-/-/Clear	Guide	Up	Up





 

 
Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Top Menu	 Shift + Menu
 Menu	 Menu
 →	 Shift + Ch +
 ←	 Shift + Ch -
 >/>>	 >>
 <</<	 <<
 >>	 >>
 <<	 <<
 Play	 Play
	 Pause
 ■	 Stop
 REC DVD1	 Rec
 REC PAUSE	 Shift + Pause

Original	Replacement
 Synchro Rec	 Shift + 1
 Rec Stop DVD1	 Shift + Stop
 Mode Rec DVD1	 Shift + Format
 Chapter Mark	 Smart
 Input Select DVD1	 Shift + AV
 Mark Erase	 Shift + Media
 Progressive DVD1	 Sleep
 Sur DVD1	 Shift + Text
 Rec DVD2	 Shift + Rec
 Rec Pause	 Shift + 2
 Rec Stop DVD2	 Shift + 3
 Rec Mode DVD2	 Shift + 4
 Input Select DVD2	 Shift + 5
 Chapter Mark	 Shift + 6
 Mark Erase	 Shift + 7
 Synchro Rec	 Shift + 8
 Progressive DVD2	 Shift + Sleep



DVD1












 

 

 

 









 



 




Original	Replacement
 Sur DVD2	 +  Shift + 9

Original	Replacement

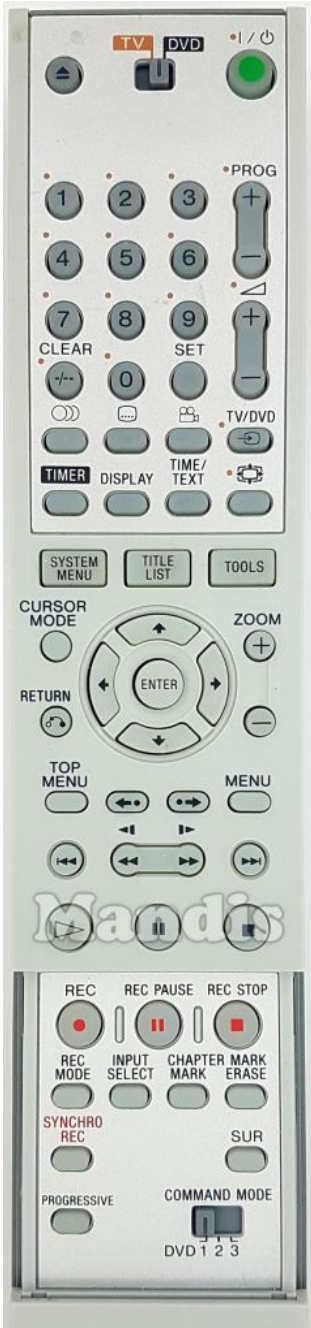 




Original	Replacement
 Power	 Power
 Open/Close	 Eject
 Prog+	 Ch +
 Prog-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/Clear	 GUIDE

Original	Replacement
 Set	 D. Menu
 O))	 Dual
 [...]	 Subt
 Camera	 Green
 Input/Tv/DVD	 TV/R
 Timer	 AV
 Display	 Info
 Time/Text	 Text
 [+]	 Format
 System Menu	 Media
 Title List	 List
 Tools	 Options
 Cursor Mode	 Exit
 Zoom+	 Blue
 Zoom-	 Yellow
 Return	 Back
 Up	 Up





Original	Replacement
	Down
	Right
	Left
	Ok
	+ Shift + Menu
	Menu
	+ Shift + Ch +
	+ Shift + Ch -
	>>
	<<
	>>
	I<<
	Play
	Pause
	Stop
	Rec
	+ Shift + Pause

Original	Replacement
	+ Shift + Stop
	+ Shift + Rec
	3D
	Smart
	+ Shift + Media
	Sleep
	Pre Ch
	+ Shift + Text



DVD3