

 
 
 
 


 


 
 






 

 

 







 









 



 

 
 
 
 
 

 
 
 








Original	Replacement	Original	Replacement
 Power	 Power	 Red	 Red
 1	 1	 Green	 Green
 2	 2	 Yellow	 Yellow
 3	 3	 Blue	 Blue
 4	 4	 Guide	 Guide
 5	 5	 Rec List	 List
 6	 6	 Input	 AV
 7	 7	 *	 Menu
 8	 8	 Up	 Up
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 [i+]	 Info	 Left	 Left
 [=]	 Text	 OK	 Ok
 Google Play	 Shift + Media	 Back	 Back
 Netflix	 Media	 TV	 TV/R

Not voice control function.





Original	Replacement	Original	Replacement
HOME	Smart	Exit	Exit
Vol+	Vol +		
Vol-	Vol -		
Recall	Pre Ch		
Mute	Mute		
CH+	Ch +		
CH-	Ch -		
Audio	Dual		
[...]	Subt		
Help	D. Menu		
<<<	<<<		
Play	Play		
>>>	>>>		
Rec	Rec		
Pause	Pause		

Not voice control function.

