




 


 

 
 
 
 
 

 

 
 
 
 






 
 

 







 




 


 
 

 

 



 





 

 






Original	Replacement
 System Standby	 Power
 Muting	 Mute
 Menu	 Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / 10	 0
 Display	 Info
 2 CH	 Red
 AFD	 Green
 Movie	 Yellow

Original	Replacement
 Music	 Blue
 Master Vol +	 Vol +
 Master Vol -	 Vol -
 >>I / Preset +	 >>I
 I<< / Preset -	 I<<
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Sleep	 Sleep
 FM Mode	 Smart
 Enter / Memory	 Media
 Auto Cal	 Options
 << / Tuning -	 <<
 >> / Tuning +	 >>
 D.Tuning	 Text








Original	Replacement
 Power	 Power
 Power AV	 +  Shift + Power
 Auto Cal	 Smart
 Sleep	 Sleep
 2CH	 Red
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0/10	 0
 -/-->10	 Guide
 Enter/Memory	 Pre Ch
 Menu	 Menu
 DVD Menu	 D. Menu
 Return/Exit	 Exit
 Tools	 Options
 Display	 Info
 D.Tuning/D.Skip	 Dual
 FM Mode	 AV
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right









 


 


 

 

 
 




 
 
 

 

 

 
 




Original	Replacement
	 Left
	 Play
	 Pause
	 Stop
	 <</Tuning-
	 >>/Tuning+
	 >>I/Preset+
	 I<</Preset-
	 ←/Replay
	 →/Advance
	 DVD
	 Tuner
	 D.Tuning/D.Skip Tuner
	 Enter/Memory
	 1 Tuner
	 2 Tuner
	 3 Tuner

Original	Replacement
	 Shift + 4
	 Shift + 5
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Shift + 0
	 Display Tuner
	 OK Tuner
	 Up Tuner
	 Down Tuner
	 Right Tuner
	 Left Tuner
	 <</Tuning- Tuner
	 >>/Tuning+
	 I<</Preset-/Tv CH- Tuner
	 >>I/Preset+/Tv CH+ Tuner





Original	Replacement
 Power	 Power
 Play	 Play
 Stop	 Stop
 Auto Cal	 Smart
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 >10* CLEAR	 Guide
 OK	 Ok

Original	Replacement
 Enter/Memory	 Pre Ch
 Menu	 Menu
 Display	 Shift + Info
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 FM Mode	 AV
 2CH	 Red
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 Pause	 Pause
 >>/Tuning+	 >>




 


Original	Replacement
 Power	 Power
 Power AV	 +  Shift + Power
 Auto Cal	 Smart
 Sleep	 Sleep
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0

Original	Replacement
 -/-->10	 +  Shift + Guide
 Enter/Memory	 Pre Ch
 FM Mode	 AV
 Display	 +  Shift + Info
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <</Tuning-	 <<





Original	Replacement	Original	Replacement
TUNING + 	>>/Tuning+ 		7 SA-CD/CD 
TV CH+ PRESET + 	>>I/Preset+ 		8 SA-CD/CD 
TV CH- PRESET - 	I<</Preset- 		9 SA-CD/CD 
REPLAY 	←/Replay 		0/10 SA-CD/CD 
ADVANCE 	→/Advance 		-/->10 SA-CD/CD 
VIDEO 2 	Video 2 		Display SA-CD/CD 
SA-CD/CD 	SA-CD/CD 		Stop SA-CD/CD 
TV/AV/AVI/AV SYSTEM 	Power AV 		Pause 
2CH 	2CH 		Play SA-CD/CD 
D.TUNING 	D.Tuning/D.Skip SA-CD/CD 		<</Tuning- 
MEMORY ENTER 	Enter/Memory SA-CD/CD 		>>/Tuning+ 
1 SA-CD/CD 	1 SA-CD/CD 		I<</Preset- SA-CD/CD 
2 SA-CD/CD 	2 SA-CD/CD 		>>I/Preset+ SA-CD/CD 
3 SA-CD/CD 	3 SA-CD/CD 		
4 SA-CD/CD 	4 SA-CD/CD 		
5 SA-CD/CD 	5 SA-CD/CD 		
6 SA-CD/CD 	6 SA-CD/CD 		

Original	Replacement	Original	Replacement
	TV		MUTE
	DVD		SHIFT
	SAT		TV
	AUX		DVD
	PLAY MODE		SAT
	REC MODE		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX
	TV		TV
	DVD		DVD
	SAT		SAT
	AUX		AUX

