


 

 

 















 





 









 



 







 





 





Original	Replacement	Original	Replacement
 Sleep	 Sleep / Timer	 5	 5
 Power	 Power	 Enter 2	 Shift + OK
 VIDEO 1	 Shift + 4	 6	 6
 DVD/LD	 Shift + 2	 7	 7
 VIDEO 2	 Shift + 9	 8	 8
 TV / SAT	 Shift + 1	 9	 9
 VIDEO 3	 Shift + Guide / EPG / -/-	 >10	 Guide / EPG / -/-
 TV / SAT	 Shift + 0	 0	 0
 AUX	 Shift + 7	 Enter	 OK
 PHONO	 Shift + 8	 D.Tuning	 Smart / List
 CD/SACD	 Shift + 3	 D.Skip/CH/Preset	 CH+ / Page+
 MD/TAPE	 Shift + 5	 D.Skip/CH/Preset -	 CH- / Page-
 TUNER	 Shift + 6	 Display	 Display / Media
 1	 1	 A.F.D.	 Red / Netflix / Search
 2	 2	 2CH / Off	 Green / APP / Repeat
 3	 3	 MULTI CH / 2CH DIRECT	 Info / Angle
 4	 4	 Mode-	 << / Tune-





Original	Replacement
 Mode+	 >> / Tune+
 Muting	 Mute / Dimmer
 Test Tone	 Text / Goto
 Main Menu	 Menu / Home
 Master Vol+	 Vol+
 Menu Left	 Left
 Menu Right	 Right
	 Blue / Prime Video / Random
 Master Vol-	 Vol-
	 Yellow / YouTube / Repeat

Original	Replacement

