

 







 


 
 



 

 



 
 
 


 







Original	Replacement
 Power	 Power
 [i+]	 INFO
 [+]	 PICTURE FORMAT
 <</<	 <<
 Play	 PLAY MODE
 Pause	
 >>/ >	 >>
 Sync Menu	 TOP MENU MENU
 Stop	 ■
 Theatre	 SEARCH TV/R
 Digital	 E-MANUAL D.MENU
 Analog	 APP MEDIA
 [...]	 AD SUBT
 Audio	 SOUND DUAL
 Guide	 -/-- GUIDE
 Source	 TIMER AV
 Up	 ▲

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return	 SHIFT + RETURN BACK
 Options	 SETTINGS OPT
 Home	 HOME SMART
 Red	 A
 Green	 B
 Yellow	 C
 Blue	 D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 Text	 REPEAT TEXT Text
 FAV	 FAV PRE-CH Pre Ch
 Vol+	 + VOL Vol +
 Vol-	 - VOL Vol -
 Mute	 MUTE Mute
 Prog+	 + CH Ch +
 Prog-	 - CH Ch -
 Back	 RETURN BACK Back

Original	Replacement

