


 

 












 



 



 




 



 

 
 
 









 

 









 




 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Subtitle	 Subt
 Open/Close	 Eject	 Angle	 Red
 1	 1	 Sur	 Options
 2	 2	 Search Mode	 AV
 3	 3	 Repeat	 Shift + Text
 4	 4	 A-B	 Shift + Play
 5	 5	 Shuffle	 Yellow
 6	 6	 SA-CD	 Smart
 7	 7	 Album+	 Ch +
 8	 8	 Album-	 Ch -
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Picture Navi	 TV/R
 Clear	 Exit	 Next >>	 >>
 Enter	 Pre Ch	 Prev <<	 <<
 Time/Text	 Text	 Scan >>/Slow	 >>
 Picture Mode	 Format	 << Scan/<I	 <<
 Audio	 Dual	 <-/Instant Replay/<I Step	 Shift + I<<










 

 




 








 




 


Original	Replacement	Original	Replacement
 Step II>/Instant Advance/·→	 Shift + >>I		
 Play	 Play		
 Pause	 Pause		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Display	 Info		
 Menu	 Menu		
 Top Menu	 Shift + Menu		
 Return	 Back		
 Stop	 Stop		
 SA-CD/CD	 Media		

Original	Replacement	Original	Replacement





	Original	Replacement	Original	Replacement
	Power			
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Enter			
	Tv/Video			
	Vol+			
	Vol-	