










 

 



 







 









 









| Original | Replacement |
|---|---|
|  |  Eject / Surround |
|  |  Power |
|  |  Display / Media |
|  |  Picture / Format |
|  |  Audio / Lang I/II |
|  |  Smart / List |
|  |  Exit / Cancel / Clear |
|  |  TV/Radio / |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |

| Original | Replacement |
|---|---|
|  |  Guide / EPG / -/-- |
|  |  0 |
|  |  AV / Input / RDS |
|  |  Vol+ |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  CH- / Page- |
|  |  Rec / Rec Mode |
|  |  Shift + Slow Play / |
|  |  Shift + Tune+ >> / |
|  |  D.Menu / Top |
|  |  I<< / Preset- |
|  |  >>I / Preset+ |
|  |  Menu / Home |
|  |  Up |
|  |  Pause / Step / Freeze |
|  |  Sleep / Timer |





| Original | Replacement |
|---|--|
|  Power |  Power |
|  Display |  Display / Media |
|  Format |  Picture / Format |
|  Audio Monitor |  Audio / Lang I/II |
|  TV / Video |  TV/Radio / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  -/-- |  Guide / EPG / -/-- |
|  0 |  0 |
|  Vol+ |  Vol+ |

| Original | Replacement |
|---|---|
|  Prog+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Prog- |  CH- / Page- |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

