





































Original	Replacement
 Continue Play	 Text / Goto
 Shuffle Play Mode	 AV / Input / RDS
 Program Play	 Setup / OPT /
 Repeat	 Shift + Green / APP /
 Check	 Display / Media
 Clear	 Exit / Cancel / Clear
 Time	 Sleep / Timer
 Fader	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 >10	 Guide / EPG / -/-
 10/0	 0
 Disc 1	 Red / Netflix / Search
 Disc2	 Green / APP / Repeat
 Disc3	 Yellow / YouTube / Repeat
 Disc4	 Blue / Prime Video / Random
 Disc5	 Smart / List
 Disc Skip	 Fav / Marker / PC
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<< AMS	 I<< / Preset-
 AMS >>I	 >>I / Preset+
 Analog Out	 Vol+
 <<	 << / Tune-
 >>	 >> / Tune+
 Analog Out Level-	 Vol-

